



Kaysun


OWNER'S & INSTALLATION MANUAL

Swimming Pool Heat Pump

KSWP-70 DR8
KSWP-90 DR8

KSWP-120 DR8
KSWP-160 DR8

KSWP-200 DR8
KSWP-200 DTR8

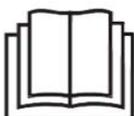

Original instructions.

Please read this manual carefully and keep it for future reference.

All the pictures in this manual are for illustration purpose only.

To consult this manual **in other languages**, please visit our web site at
<https://www.kaysun.es/>



RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION

⚠ WARNING

These instructions are intended as an aid to qualified licensed service personnel for proper installation, adjustment and operation of this unit. Read these instructions thoroughly before attempting installation or operation. Failure to follow these instructions may result in improper installation, adjustment, service or maintenance possibly resulting in fire, electrical shock, property damage, personal injury.



⚠ CAUTION

Please drain water when the unit is not in use in winter to avoid freeze damage.

CONTENTS

1 SAFETY PRECAUTIONS	02
2 GENERAL INTRODUCTION	07
3 ACCESSORIES SUPPLIED WITH THE UNIT	08
4 INSTALLATION SITE	08
4.1 Location space requirement	08
4.2 Location selection in cold climates	09
4.3 Location selection in direct sunlight	09
5 INSTALLATION PRECAUTIONS	09
5.1 Dimensions	09
5.2 Shock absorption and fixations	10
5.3 Drain hole position	11
5.4 Inlet & Outlet water pipes	11
5.5 Field wiring	11
5.6 Safety device requirement	12
6 TYPICAL APPLICATIONS	13

7 OVERVIEW OF THE UNIT	14
7.1 Refrigerant cycle	14
7.2 Main components	15
7.3 Inverter drive board	16
7.4 Main control board	17
7.5 Connection of optional function	18
8 START-UP AND CONFIGURATION	19
8.1 Initial start-up at low outdoor ambient temperature	19
8.2 Pre-operation checks	19
8.3 Failure diagnosis at first installation	19
9 FINAL CHECKS AND TEST RUN	20
10 MAINTENANCE AND SERVICE	20
10.1 Routine maintenance	20
10.2 Notes for maintenance & Repair	21
11 TROUBLESHOOTING	23
12 TECHNICAL SPECIFICATIONS	24
13 INFORMATION SERVICING	25

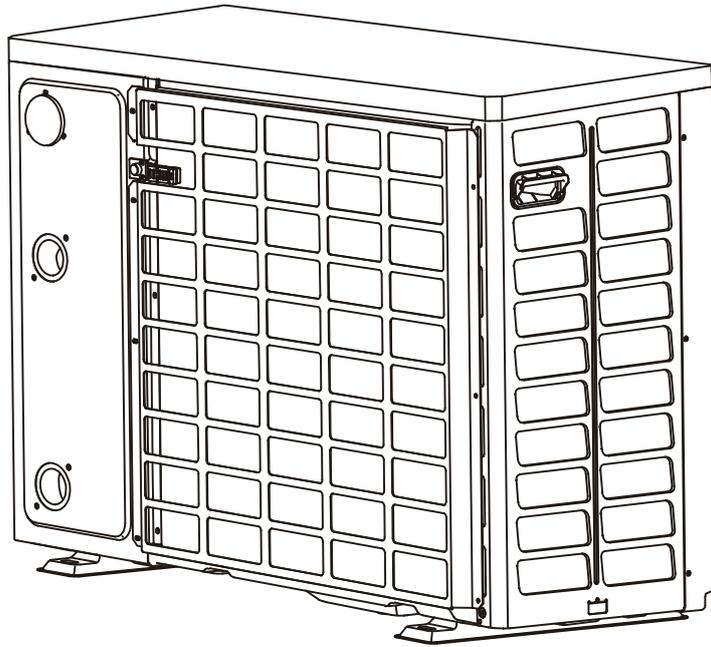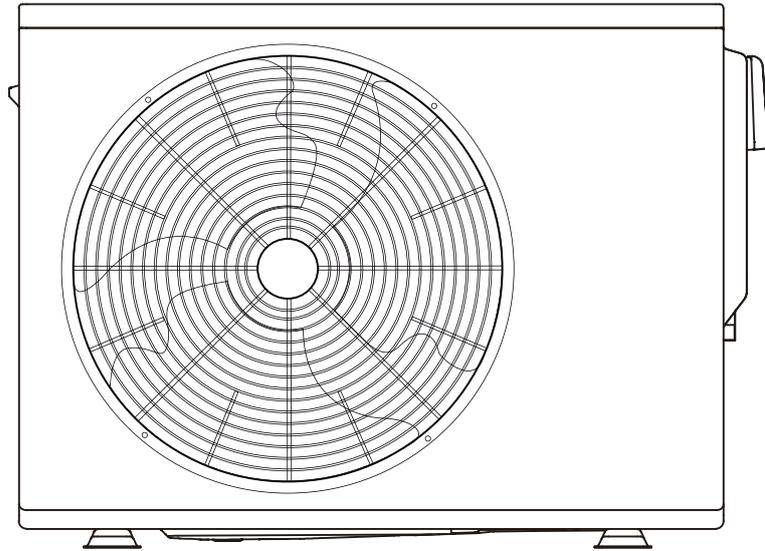

 **NOTE**

- The pictures in this manual are for reference only, please refer to the actual product.

1 SAFETY PRECAUTIONS

The precautions listed here are divided into the following types. They are quite important, so be sure to follow them carefully. Meanings of DANGER, WARNING, CAUTION and NOTE symbols.

INFORMATION

- Read these instructions carefully before installation. Keep this manual in a handy for future reference.
- Improper installation of equipment or accessories may result in electric shock, short-circuit, leakage, fire or other damage to the equipment. Be sure to only use accessories made by the supplier, which are specifically designed for the equipment and make sure to get installation done by a professional.
- All the activities described in this manual must be carried out by a licensed technician. Be sure to wear adequate personal protection equipment such as gloves and safety glasses while installing the unit or carrying out maintenance activities.
- Contact your dealer for any further assistance.

 <p>WARNING: Risk of fire/flammable materials for IEC/EN 60335-2-40 except IEC 60335-2-40: 2018</p>	 <p>WARNING: Risk of fire/flammable materials for IEC 60335-2-40: 2018 only</p>
---	--

WARNING

Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

DANGER

Indicates a hazard with a high level of risk which, if not avoided, will result in serious injury.

WARNING

Indicates a hazard with a medium level of risk which, if not avoided, could result in serious injury.

CAUTION

Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTE

A situation that may cause damage to the equipment or loss of property.

Explanation of symbols displayed on the unit

	WARNING	This symbol shows that this appliance used a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
	CAUTION	This symbol shows that the operation manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.
	CAUTION	This symbol shows that information is available such as the operating manual or installation manual.

Target group

DANGER

The following information indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

These instructions are exclusively intended for qualified contractors and authorised installers.

Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.

Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

- Work on the refrigerant circuit with flammable refrigerant in safety group A2L may only be carried out by authorised heating contractors. These heating contractors must be trained in accordance with EN 378 Part 4 or IEC 60335-2-40, Section HH. The certificate of competence from an industry accredited body.
- Brazing/soldering work on the refrigerant circuit may only be carried out by contractors certified in accordance with ISO 13585 and AD 2000, Datasheet HP 100R. And only by contractors qualified and certified for the processes to be carried out. The work must fall within the range of applications purchased and be carried out in accordance with the prescribed procedures. Soldering/brazing work on accumulator connections requires certification of personnel and processes by a notified body according to the Pressure Equipment Directive (2014/68/EU).
- Work on electrical equipment may only be carried out by a qualified electrician.
- Before initial commissioning, all safety relevant points must be checked by the particular certified heating contractors. The system must be commissioned by the system installer or a qualified person authorised by the installer.

WARNING

The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).

The appliance shall be stored so as to prevent mechanical damage from occurring.

Warnings about the R32 refrigerant

WARNING

The following information indicates a hazard with a medium level of risk which, if not avoided, could result in serious injury.

The following applies to R32 refrigerant systems.

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.

For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.

Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.

Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.

All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space.

Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- the charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- the ventilation machinery and outlets are operating adequately and are not obstructed;
- if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.

If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres.

Replacement parts shall be in accordance with the manufacturer's specifications.

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of ageing or continual vibration from sources such as compressors or fans.

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, it is important that best practice is followed.

Since flammability is a consideration. The following procedure shall be adhered to:

- remove refrigerant;
- purge the circuit with inert gas;
- evacuate;
- purge again with inert gas;
- open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be "flushed" with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.

This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available. Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them. Prior to recharging the system it shall be pressure tested with OFN.

DD.12 Decommissioning:

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.

- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions.
- h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant. When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

Warning: disconnect the appliance from its power source during service and when replacing parts.

These units are partial unit air conditioners, complying with partial unit requirements of this International Standard, and must only be connected to other units that have been confirmed as complying to corresponding partial unit requirements of this International Standard.

DANGER

- Before touching electric terminal parts, turn off power switch.
- When service panels are removed, live parts can be easily touched by accident.
- Never leave the unit unattended during installation or servicing when the service panel is removed.
- Do not touch water pipes during and immediately after operation as the pipes may be hot and could burn your hands. To avoid injury, give the piping time to return to normal temperature or be sure to wear protective gloves.
- Do not touch any switch with wet fingers. Touching a switch with wet fingers can cause electrical shock.
- Before touching electrical parts, turn off all applicable power to the unit.

WARNING

- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face danger of death by suffocation.
- Safely dispose of packing materials such as nails and other metal or wood parts that could cause injuries.
- Ask your dealer or qualified personnel to perform installation work in accordance with this manual. Do not install the unit yourself. Improper installation could result in water leakage, electric shocks or fire.
- Be sure to use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shocks, fire, or the unit falling from its mount.
- Install the unit on a foundation that can withstand its weight. Insufficient physical strength may cause the equipment to fall and possible injury.
- Perform specified installation work with full consideration of strong wind, hurricanes, or earthquakes. Improper installation work may result in accidents due to equipment falling.
- Make certain that all electrical work is carried out by qualified personnel according to the local laws and regulations and this manual using a separate circuit. Insufficient capacity of the power supply circuit or improper electrical construction may lead to electric shocks or fire.
- Be sure to install a ground fault circuit interrupter according to local laws and regulations. Failure to install a ground fault circuit interrupter may cause electric shocks and fire.

- Make sure all wiring is secure. Use the specified wires and ensure that terminal connections or wires are protected from water and other adverse external forces. Incomplete connection or affixing may cause a fire.
- When wiring the power supply, form the wires so that the front panel can be securely fastened. If the front panel is not in place there could be overheating of the terminals, electric shocks or fire.
- After completing the installation work, check to make sure that there is no refrigerant leakage.
- Never directly touch any leaking refrigerant as it could cause severe frostbite. Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor and other refrigerant cycle parts. Burns or frostbite are possible if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear protective gloves.
- Do not touch the internal parts (pump, backup heater, etc.) during and immediately after operation. Touching the internal parts can cause burns. To avoid injury, give the internal parts time to return to normal temperature or, if you must touch them, be sure to wear protective gloves.

CAUTION

- Ground the unit.
- Grounding resistance should be according to local laws and regulations.
- Do not connect the ground wire to gas or water pipes, lightning conductors or telephone ground wires.
- Incomplete grounding may cause electric shocks.
 - Gas pipes: Fire or an explosion might occur if the gas leaks.
 - Water pipes: Hard vinyl tubes are not effective grounds.
 - Lightning conductors or telephone ground wires: Electrical threshold may rise abnormally if struck by a lightning bolt.
- Install the power wire at least 3 feet (1 meter) away from televisions or radios to prevent interference or noise. (Depending on the radio waves, a distance of 3 feet (1 meter) may not be sufficient to eliminate the noise.)
- Do not wash the unit. This may cause electric shocks or fire. The appliance must be installed in accordance with national wiring regulations..
- Do not install the unit in the following places:
 - Where there is mist of mineral oil, oil spray or vapors. Plastic parts may deteriorate, and cause them to come loose or water to leak.
 - Where corrosive gases (such as sulphurous acid gas) are produced. Where corrosion of copper pipes or soldered parts may cause refrigerant to leak.
 - Where there is machinery which emits electromagnetic waves. Electromagnetic waves can disturb the control system and cause equipment malfunction.
 - Where flammable gases may leak, where carbon fiber or ignitable dust is suspended in the air or where volatile flammables such as paint thinner or gasoline are handled. These types of gases might cause a fire.
 - Where the air contains high levels of salt such as near the ocean.
 - Where voltage fluctuates a lot, such as in factories.
 - In vehicles or vessels.
 - Where acidic or alkaline vapors are present.
- This appliance can be used by children 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or given instruction on using the unit in a safe manner and understand the hazards involved. Children should not play with the unit. Cleaning and user maintenance should not be done by children without supervision. (For EN system)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. (for IEC system)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
- DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. Do not dispose of electrical appliances as municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substance can leak into the groundwater and get into the food chain, damaging your health and well-being.

- The wiring must be performed by professional technicians in accordance with national wiring regulation and this circuit diagram. An all-pole disconnection device which has at least 3mm separation distance in all pole and a residual current device(RCD) with the rating not exceeding 30mA shall be incorporated in the fixed wiring according to the national rule.
- The appliance shall be installed in accordance with national wiring regulations.
- Confirm the safety of the installation area (walls, floors, etc.) without hidden dangers such as water, electricity, and gas. Before wiring/pipes.
- Before installation , check whether the user's power supply meets the electrical installation requirements of unit (including reliable grounding , leakage , and wire diameter electrical load, etc.). If the electrical installation requirements of the product are not met, the installation of the product is prohibited until the product is rectified.
- When installing multiple air conditioners in a centralized manner, please confirm the load balance of the three-phase power supply, and multiple units are prevented from being assembled into the same phase of the three-phase power supply.
- Product installation should be fixed firmly. Take reinforcement measures, when necessary.

NOTE

- About Fluorinated Gasses
 - This heat pump unit contains fluorinated gasses. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself. Compliance with national gas regulations shall be observed.
 - Installation, service, maintenance and repair of this unit must be performed by a certified technician.
 - Product uninstallation and recycling must be performed by a certified technician.
 - If the system has a leak-detection system installed, it must be checked for leaks at least every 12 months. When the unit is checked for leaks, proper record-keeping of all checks is strongly recommended.
- Equipment complying with IEC 61000-3-12.



2 GENERAL INTRODUCTION

- These units are used for both heating and cooling the water of swimming pool, they can keep the pool water temperature stable at the set temperature to provide comfortable swimming condition in different seasons.
- A wired controller is supplied with the unit.

NOTE

- Maximum length of communication wirings between the unit and the controller is 20m.
- Power cords and communication wires must be laid out separately, they can not be placed in the same conduit. Otherwise, it may lead to electromagnetic interference. Power cords and communication wires should not come in contact with the refrigerant pipe so as to prevent the high temperature pipe from damaging wires.
- Communication wires must use shielded lines.

Operation range

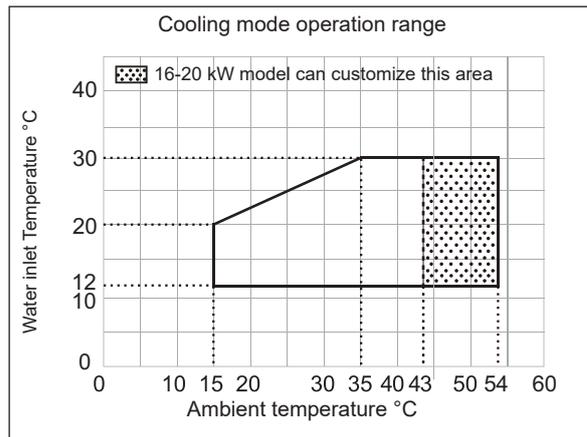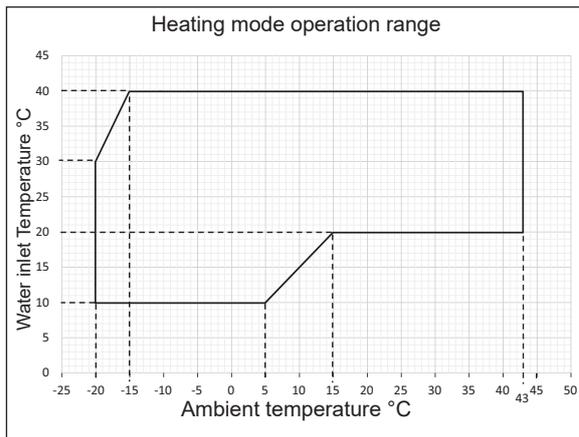

Water pressure range: 0.01~0.5 MPa

3 ACCESSORIES SUPPLIED WITH THE UNIT


Name	Shape	Quantity
Installation & owner's manual (this book)		1
Installation & owner's manual Wired controller		1
Loose joint		2
Drain connection		1
Wired controller		1
Weak electric cable group		1

4 INSTALLATION SITE

⚠ WARNING

- There is flammable refrigerant in the unit and it should be installed in a well-ventilated site. If the unit is installed inside, an additional refrigerant detection device and ventilation equipment must be added in accordance with the standard EN378. Be sure to adopt adequate measures to prevent the unit from being used as a shelter by small animals.
- Small animals making contact with electrical parts can cause malfunction, smoke or fire. Please instruct the customer to keep the area around the unit clean.
- Select an installation site where the following condition are satisfied and one that meets with your customer's approval.
 - Places that are well-ventilated.
 - Places where the unit does not disturb neighbors.
 - Safe places which can bear the unit's weight and vibration and where the unit can be installed at an even level.
 - Places where there is no possibility of flammable gas or product leak.
 - The equipment is not intended for use in a potentially explosive atmosphere.
 - Places where servicing space can be well ensured.
 - Places where the units' piping and wiring lengths come within the allowable ranges.
 - Places where water leaking from the unit cannot cause damage to the location (e.g. in case of a blocked drain pipe).
 - Places where rain can be avoided as much as possible.
 - Do not install the unit in places often used as a work space. In case of construction work (e.g. grinding etc.) where a lot of dust is created, the unit must be covered.
 - Do not place any object or equipment on top of the unit (top plate).
 - Do not climb, sit or stand on top of the unit.
 - Be sure that sufficient precautions are taken in case of refrigerant leakage according to relevant local laws and regulations.
 - Don't install the unit near the sea or where there is corrosion gas.
- When installing the unit in a place exposed to strong wind, pay special attention to the following.
 - Strong winds of 5 m/sec or more blowing against the unit's air outlet causes a short circuit (suction of discharge air), and this may have the following consequences:
 - Deterioration of the operational capacity.
 - Frequent frost acceleration in heating operation.
 - Disruption of operation due to rise of high pressure.
 - When a strong wind blows continuously on the front of the unit, the fan can start rotating very fast until it breaks.

4.1 Location space requirement

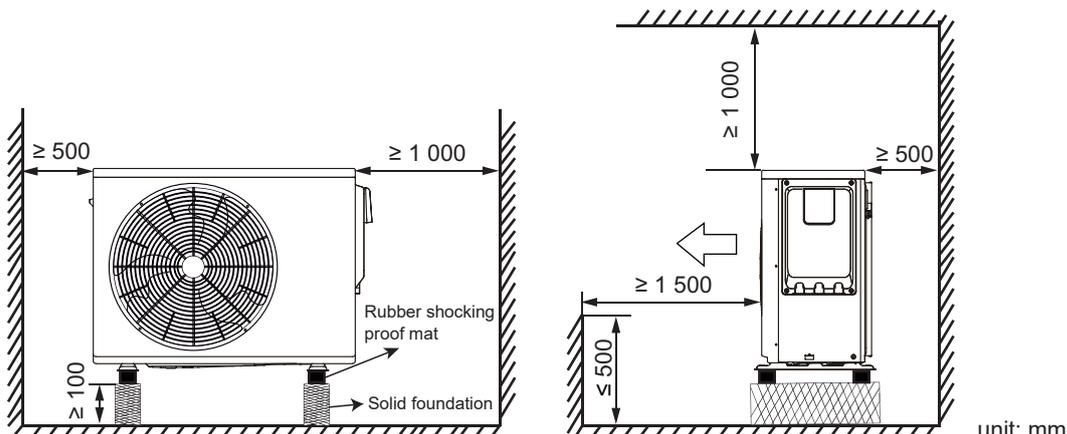

Make sure there is enough space to install the unit.

Set the outlet side at a right angle to the direction of the wind.

Mount the unit on the foundation of concrete blocks to drain waste water from around the unit.


If you install the unit on a frame, please install a waterproof plate on the underside of the unit to prevent water from coming in from the low side.

When installing the unit in a place frequently exposed to snow, pay special attention to elevate the foundation as high as possible.

4.2 Location selection in cold climates

NOTE

- When operating the unit in cold climates, be sure to follow the instructions described below.
- To prevent exposure to wind, install the unit with its suction side facing the wall.
Never install the unit at a site where the suction side may be exposed directly to wind.
To prevent exposure to wind, install a baffle plate on the air discharge side of the unit.
In heavy snowfall areas, it is very important to select an installation site where the snow will not affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is not affected by the snow (if necessary construct a lateral canopy).

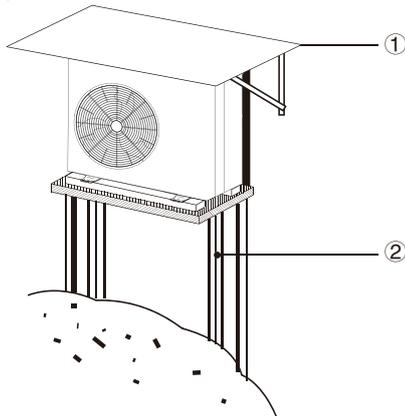

- ① Construct a large canopy.
- ② Construct a pedestal.
Install the unit high enough off the ground to prevent it from being buried in snow. (The height of the pedestal must be larger than the largest thickness of the snow in the local history plus 10cm or more)

4.3 Location selection in direct sunlight


As the outdoor temperature is measured via the unit's ambient temperature sensor, make sure to install the unit in the shade or under a canopy to avoid direct sunlight, so that it is not influenced by the sun's heat, otherwise the unit may be protected.

5 INSTALLATION PRECAUTIONS

5.1 Dimensions

Model: 70/90/120/160/200

Unit: mm

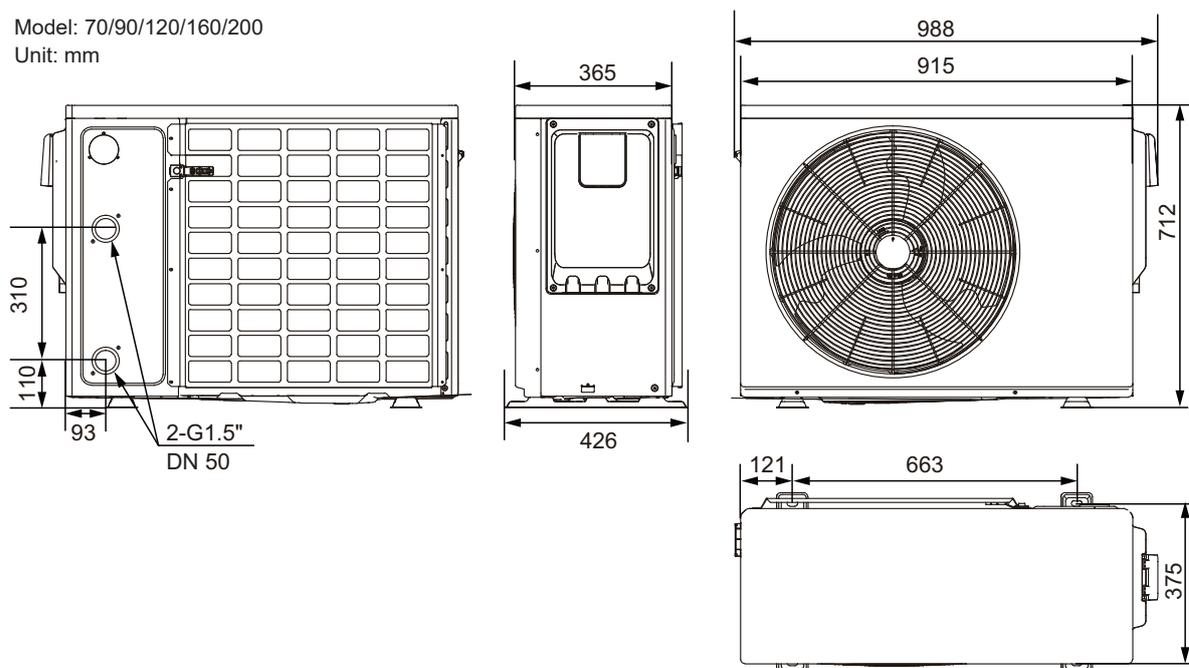


5.2 Shock absorption and fixations

- Check the strength and levelness of the installation floor, ensure that the vibration and noise of the unit are minimized.
- Bolts, nuts, gaskets, shock pads, foundations are not provided, please purchase or contact the installer.


5.2.1 Install with bolt shock pad

Item	Name	Specification	Quantity
	Bolt shock pad	30 Bolt: M 8 * 20-25 Rubber: diameter 30	4
	Nut	M 8	4
	Gasket	M 8	4

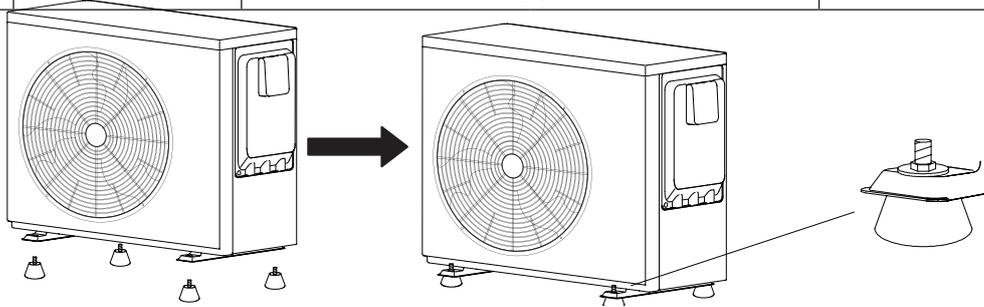

5.2.2 Install with perforated shock pad and bolts


Item	Name	Specification	Quantity
	Perforated shock pad	External diameter 30 Inner diameter \geq 10	4
	Bolt	M 8	4
	Nut	M 8	4
	Gasket	M 8	4
	Solid foundation	W * H * L : 100 * 100 * 500	2

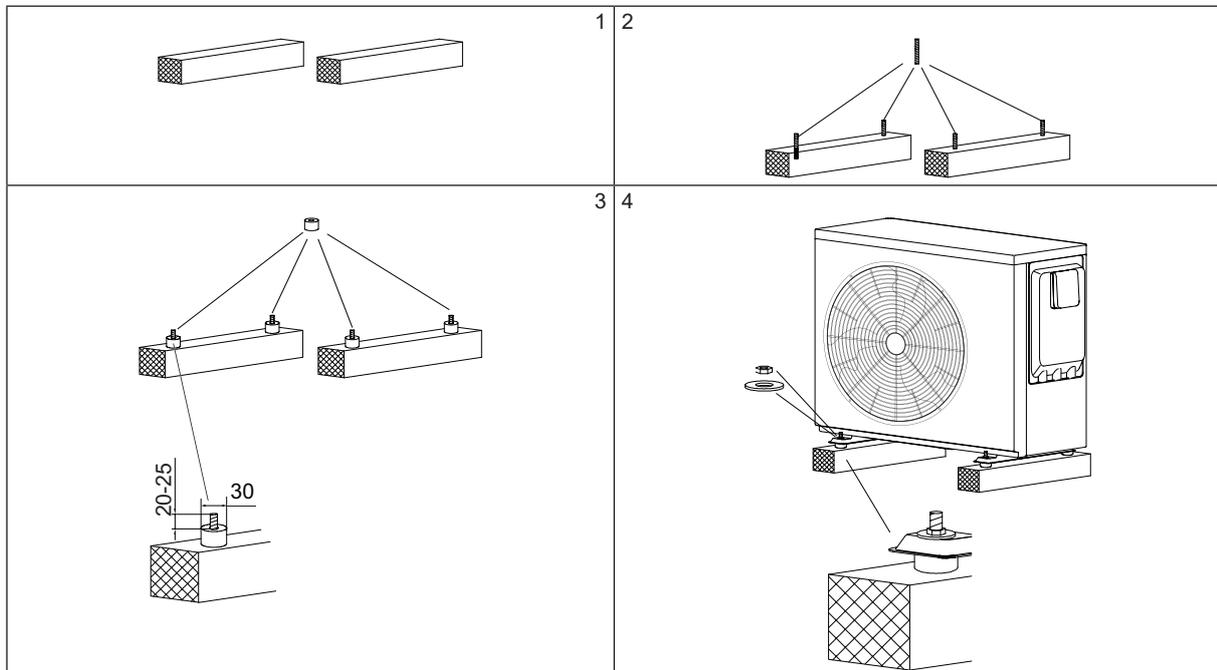

⚠ CAUTION


Ensure that apparatus is mounted securely.

5.3 Drain hole position

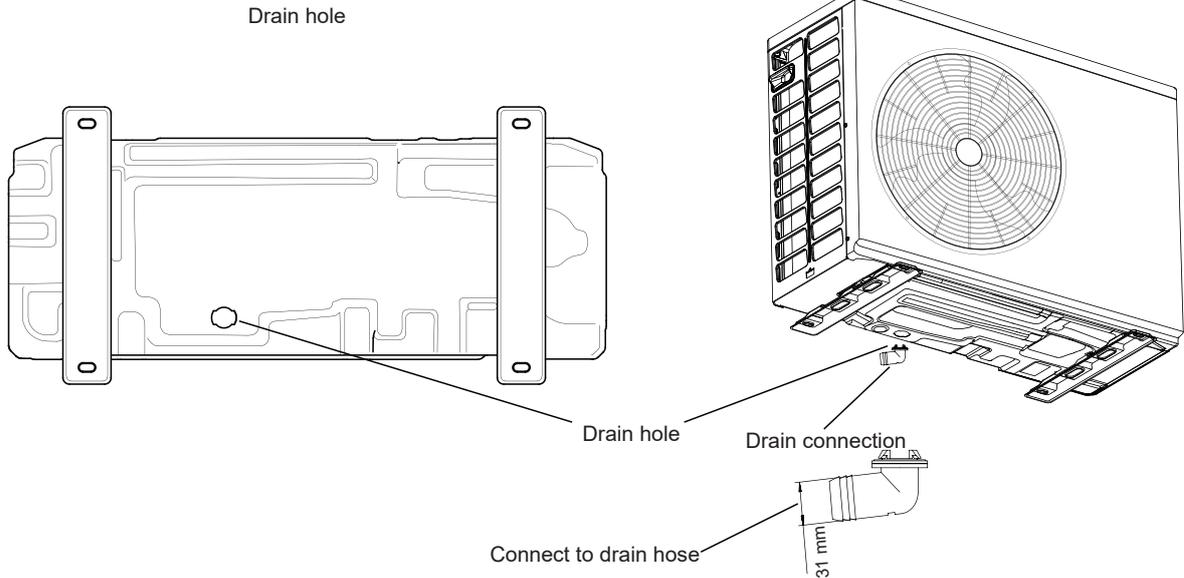



- For collecting the condensed water and discharging it centrally, please connect the unit's drain hole to drain hose (30mm) by using the Drain Connection which included in the accessory.

5.4 Inlet & Outlet water pipes

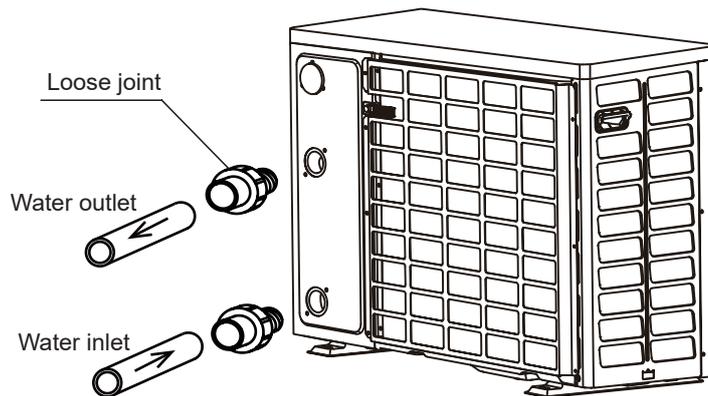

5.5 Field wiring

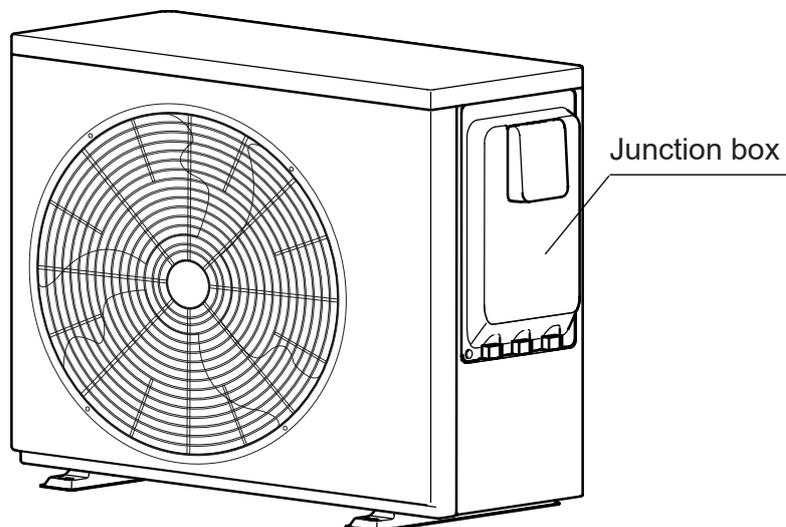

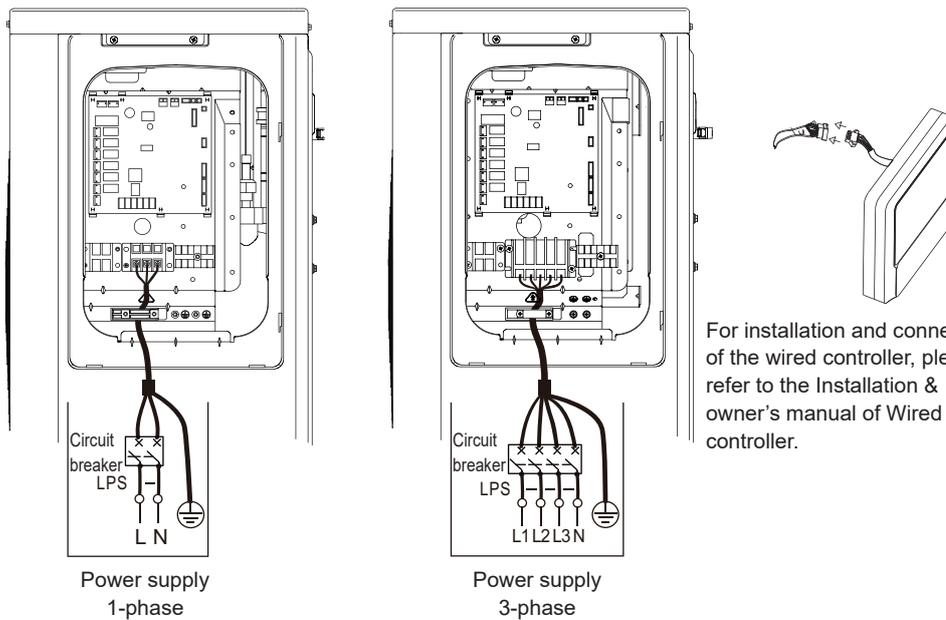

⚠ WARNING

It is prohibited to install emergency stop switch or remote switch which for stopping the unit on the unit.
 It is prohibited to install emergency stop switches or remote switches which for stopping the unit within 2 meters of the unit.
 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 The appliance shall be installed in accordance with national wiring regulations.

💡 NOTE

The ground fault circuit interrupter must be 1 high-speed type of 30 mA ($< 0.1s$).
 Each unit shall be equipped with a circuit breaker for short circuits and abnormal overload protection.
 Stated values are maximum values (see electrical data for exact values).
 Leakage protection switch must be installed to the power supply of the unit.
 Equipment must be grounded.
 All high-voltage external load, if it is metal or a grounded port, must be grounded.
 Please pay attention to the correct connection of each phase sequence of the power cord, otherwise the machine will not be able to start normally and the wired controller will not be able to display normally, only the digital tube on the main control board of the machine will display the wrong power phase sequence.
 When connecting to the power supply terminal, use the circular wiring terminal with the insulation casing (see Figure 1). Use power cord that conforms to the specifications and connect the power cord firmly. To prevent the cord from being pulled out by external force, make sure it is fixed securely.
 The power cord type designation is H05RN-F or H07RN-F.
 If circular wiring terminal with the insulation casing cannot be used, please make sure that:

- Do not connect two power cords with different diameters to the same power supply terminal (may cause overheating of wires due to loose wiring) (See Figure 2).

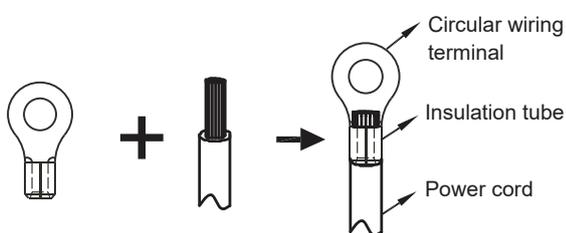


Figure 1

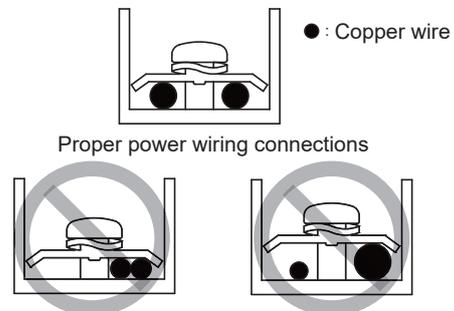


Figure 2

5.6 Safety device requirement

1. For each unit, select the wire diameters according to the Wire select table and select breaker according to the MFA value of Breaker select table. In case the MCA exceeds 63 A, the wire diameters should be selected according to the national wiring regulation.
2. For 3 phase units, maximum allowable voltage range variation between phases is 2% .
3. Select circuit breaker that having a contact separation in all poles not less than 3 mm providing full disconnection, where MFA is used to select the current circuit breakers and residual current operation breakers.

Wire select table

Rated current of appliance:(A)	Nominal cross-sectional area (mm ²)	
	Flexible cords	Cable for fix ed wiring
≤ 3	0.5 and 0.75	1 to 2.5
> 3 and ≤ 6	0.75 and 1	1 to 2.5
> 6 and ≤ 10	1 and 1.5	1 to 2.5
> 10 and ≤ 16	1.5 and 2.5	1.5 to 4
> 16 and ≤ 25	2.5 and 4	2.5 to 6
> 25 and ≤ 32	4 and 6	4 to 10
> 32 and ≤ 50	6 and 10	6 to 16
> 50 and ≤ 63	10 and 16	10 to 25


Breaker select table

Model		Power supply		Power current			Compressor		Fan motor	
		Voltage (V)	Hz	MCA (A)	TOCA (A)	MFA (A)	MSC (A)	FLA (A)	kW	FLA (A)
1-phase	70	220-240	50	10.5	14	16	-	6.8	0.05	0.4
	90	220-240	50	11	14	16	-	9.3	0.08	0.5
	120	220-240	50	12	14	16	-	10	0.11	0.7
	160	220-240	50	18	25	32	-	16.2	0.11	0.7
	200	220-240	50	23	25	32	-	22.7	0.11	0.7
3-phase	160	380-415	50	7.5	12	16	-	6.9	0.11	0.7
	200	380-415	50	9	12	16	-	8.5	0.11	0.7

NOTE

MCA : Minimum. Circuit Amps. (A)
 TOCA : Total Over-current Amps. (A)
 MFA : Max. Fuse Amps. (A)
 MSC : Max. Starting Amps. (A)
 RLA : In nominal cooling or heating test condition, the input Amps of compressor where MAX. Hz can operate Rated Load Amps. (A)
 kW : Rated Motor Output
 FLA : Full Load Amps. (A)

6 TYPICAL APPLICATIONS

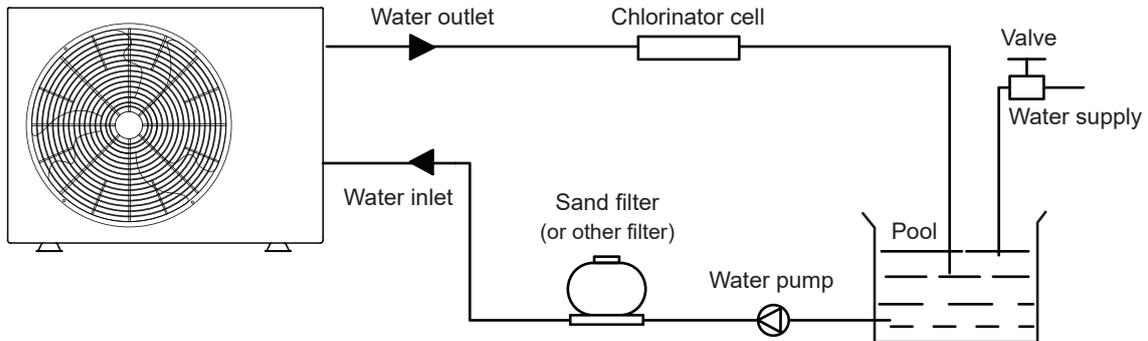

Installation items:

All the items except the heat pump in the illustration are not supplied, please purchase or contact the installer.

NOTE

Please follow these steps when using for the first time


1. Open valve and charge water.
2. Make sure that the pump and the water-inlet pipe have been filled with water.
3. Close the valve and start the unit.

Attention: It is necessary that the water-inlet pipe is higher than the pool surface.

The schematic diagram is for reference only. Please check the water inlet/outlet label on the heat pump while plumbing installation.


7 OVERVIEW OF THE UNIT

7.1 Refrigerant cycle

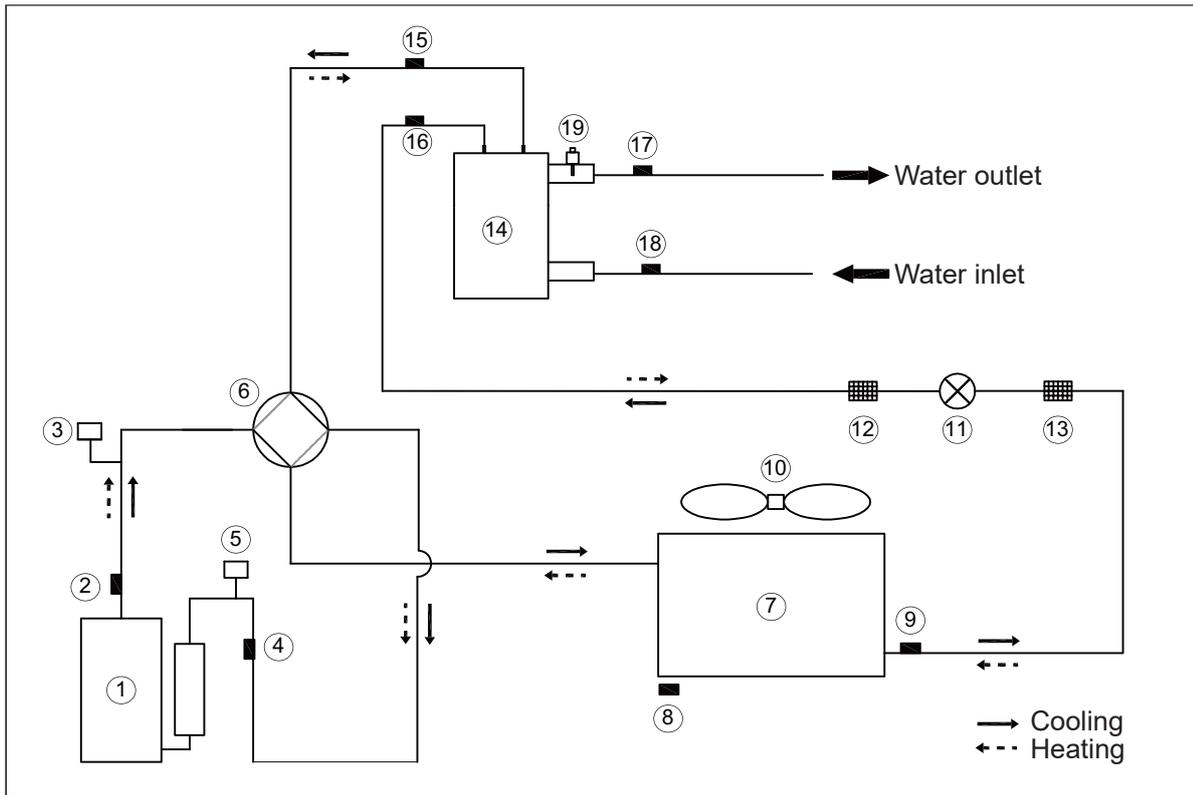

Item	Description	Item	Description
1	Compressor	11	Electronic expansion valve
2	Discharge temperature sensor	12	Filter
3	High pressure switch	13	Filter
4	Suction temperature sensor	14	Titanium heat exchanger
5	Low pressure switch	15	Gas refrigerant temperature sensor
6	4-way valve	16	Liquid refrigerant temperature sensor
7	Fin-coil heat exchanger	17	Water outlet temperature sensor
8	Ambient temperature sensor	18	Water inlet temperature sensor
9	Coil temperature sensor	19	Water flow switch
10	DC fan		

7.2 Main components

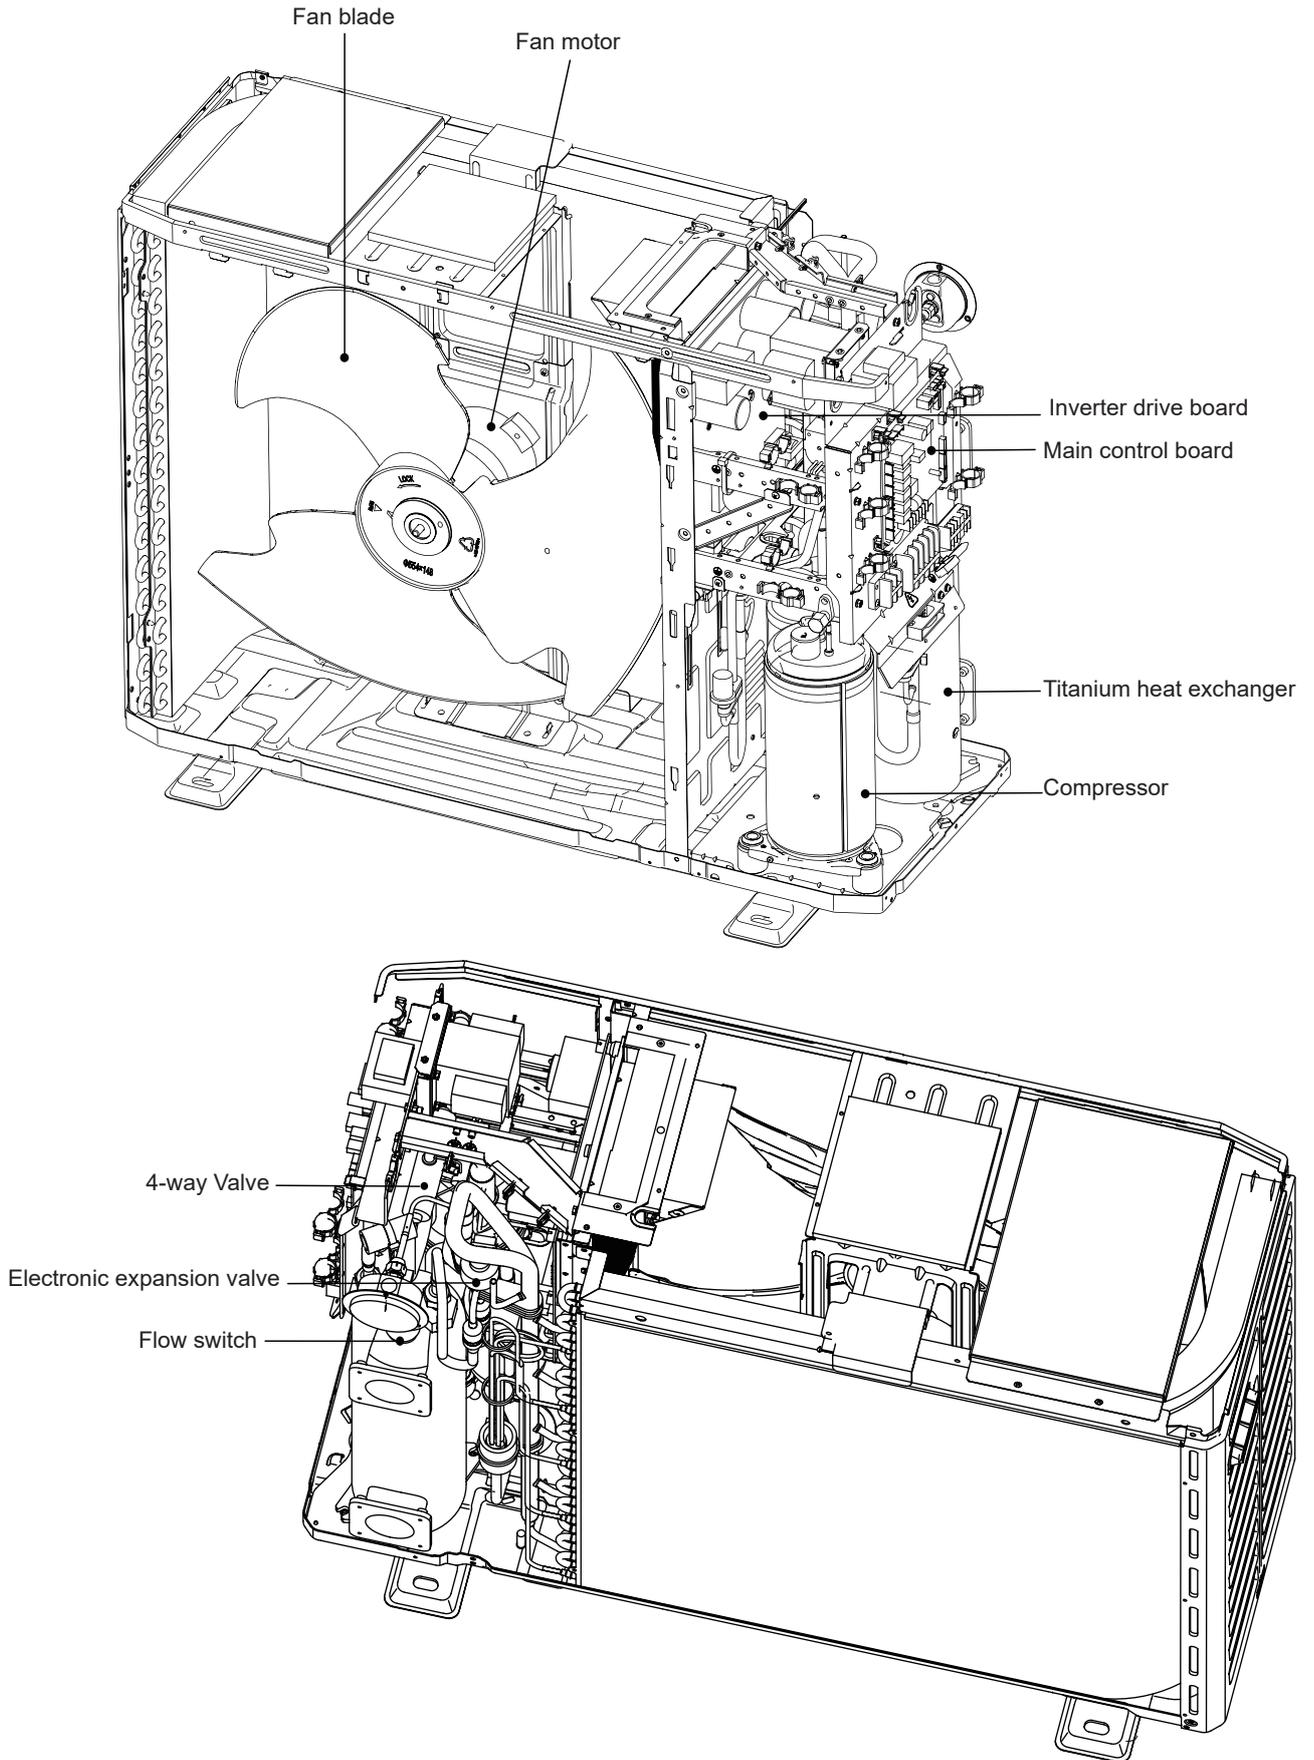


NOTE

- Take three-phase model as a sample like below. Other models are similar.


7.3 Inverter drive board

1) For 1-phase

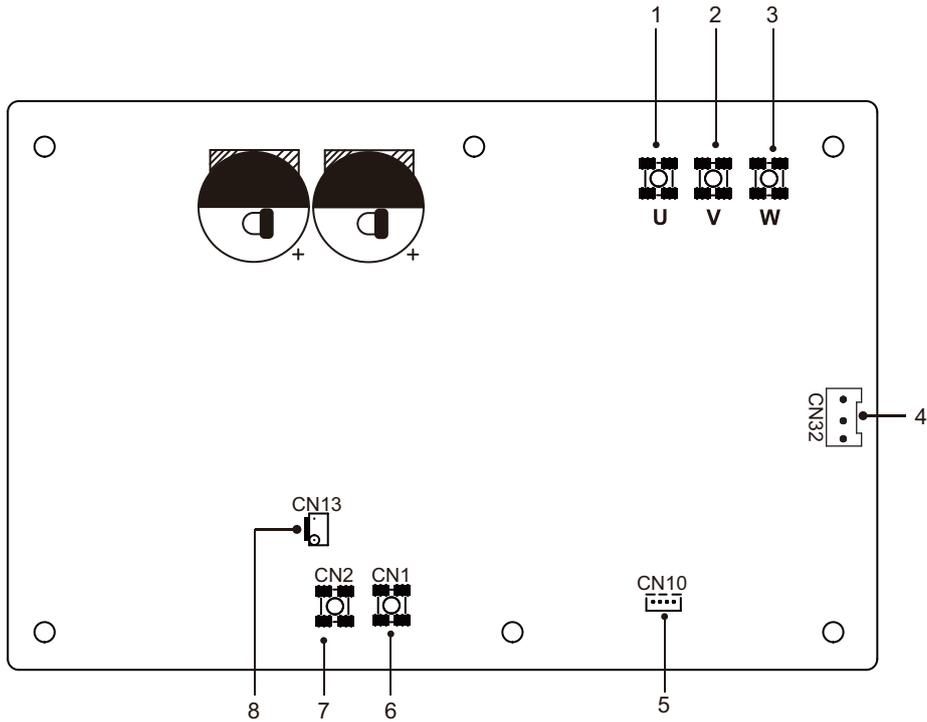


Code	Assembly unit	Code	Assembly unit
1	Compressor connection port U	5	Port for communication with main control board (CN10)
2	Compressor connection port V	6	Input port L for rectifier bridge(CN1)
3	Compressor connection port W	7	Input port N for rectifier bridge(CN2)
4	Port for fan(CN32)	8	Power supply port to Main control board(CN13)

2) For 3-phase

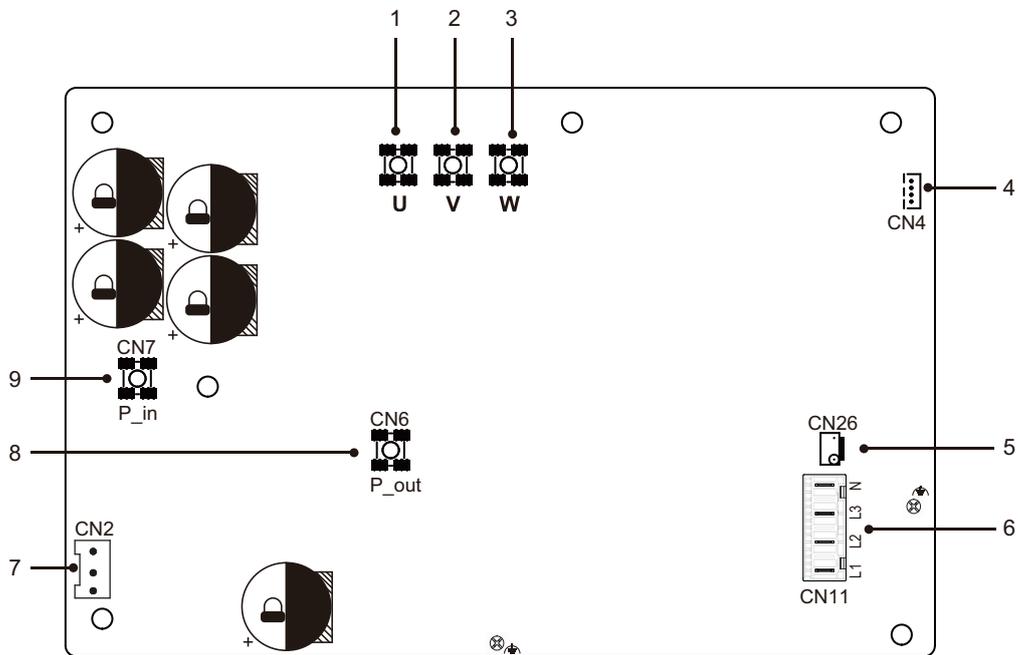

Code	Assembly unit	Code	Assembly unit
1	Compressor connection port U	6	Power supply port(CN11)
2	Compressor connection port V	7	Port for fan(CN2)
3	Compressor connection port W	8	Output port of bus(CN6)
4	Port for communication with main control board(CN4)	9	Input port of bus(CN7)
5	Power supply port to Main control board(CN26)		

7.4 Main control board

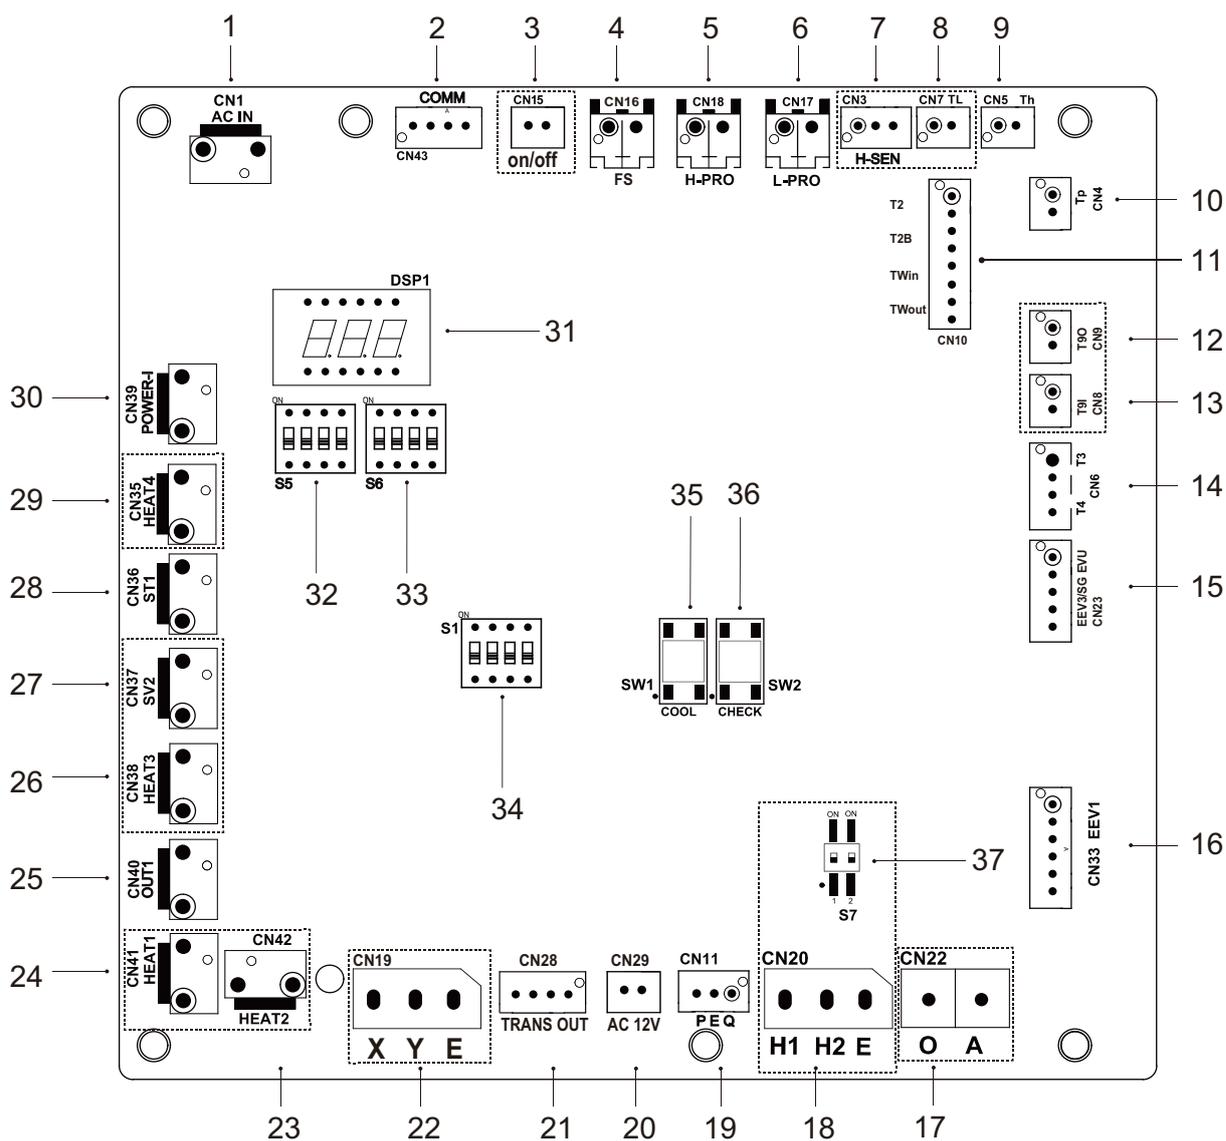


Code	Assembly unit	Code	Assembly unit
1	Power input port from Main control board (CN1)	20	Port for communication with wire controller AB (CN29)
2	Port for communication with Inverter module (CN43)	21	Port for transformer output(CN28)
3	Port for flow remote switch((CN15)	22	Port for Central Control Monitor(CN19)
4	Port for flow switch(CN16)	23	Reserved(CN42)
5	Port for high pressure switch (CN18)	24	Reserved(CN41)
6	Port for low pressure switch (CN17)	25	Port for transformer input(CN40)
7	Reserved(CN3)	26	Port for crankcase heating tape(CN38)
8	Reserved(CN7)	27	Reserved (CN37)
9	Port for TH temp. sensor(CN5)	28	Port for 4-way valve(CN36)
10	Port for TP temp. sensor(CN4)	29	Port for drainage outlet heating tape(CN35)
11	Port for T2,T2B,TW-in,TW-out temp. sensor(CN10)	30	Port for PUMP(CN39)
12	Reserved(CN9)	31	Digital display(DSP1)
13	Reserved(CN8)	32	Dip switch S5
14	Port for T3,T4 temp. sensor(CN6)	33	Dip switch S6
15	Port for EEV3/SG EVU(CN23)	34	Dip switch S1
16	Port for electrical expansion valve1(CN33)	35	Port for forced cooling(SW1)
17	Reserved(CN22)	36	Port for point check(SW2)
18	Reserved(CN20)	37	Dip switch S7(Reserved)
19	Port for communication with wire controller PQE (CN11)		


7.5 Connection of optional function

1) For smart grid:

The unit has smart grid function, there are two ports on PCB to connect SG signal and EVU signal as following:

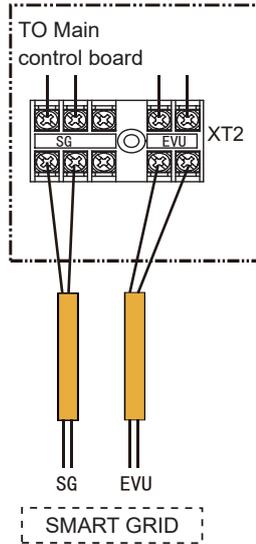

2) For outside pump :

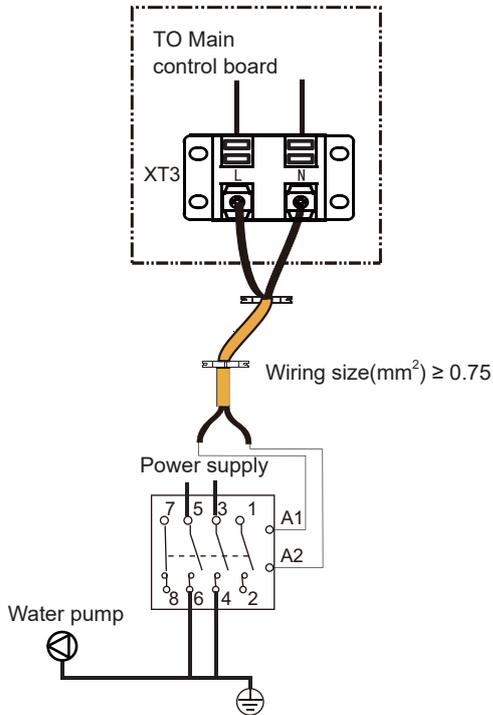

1) SG=ON, EVU=ON.

If the heat pump in heating mode:

- The heat pump automatically activates the boost function.

2) SG=OFF, EVU=ON.

If the heat pump in heating mode:

- The heat pump automatically activates the boost function.

3) SG=ON, EVU=OFF.


The unit will operate normally.

4) SG=OFF, EVU=OFF.

The heat pump will operate normally when the operating time does not exceed SMART GRID RUNNING TIME, otherwise the unit will reduce power consumption.

SMART GRID RUNNING TIME initial value is 2, range 0-255.

3) For remote switch

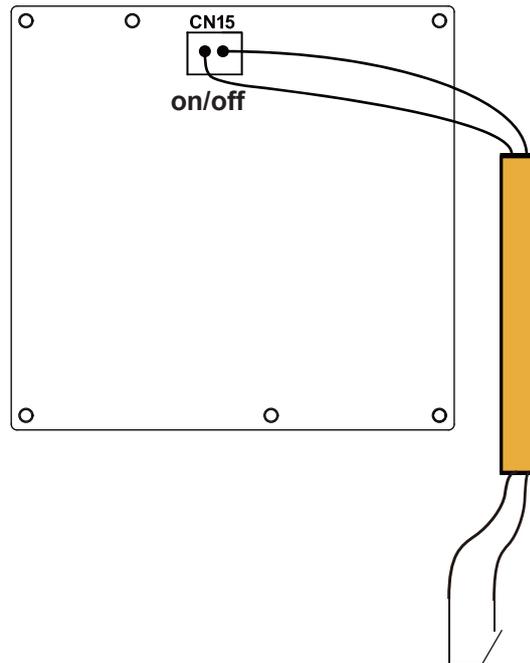

remote switch=closed, heat pump=OFF.

remote switch=opened, heat pump=ON.

8 START-UP AND CONFIGURATION

The unit should be configured by the installer to match the installation environment (outdoor climate, installed options, etc.) and user expertise.

CAUTION

It is important that all information in this chapter is read sequentially by the installer and that the system is configured as applicable.

8.1 Initial start-up at low outdoor ambient temperature

During initial start-up and when water temperature is low, it is important that the water is heated gradually.

8.2 Pre-operation checks

Checks before initial start-up.

DANGER

Switch off the power supply before making any connections.

After the installation of the unit, check the following before switching on the circuit breaker:

- Field wiring: make sure that the field wiring between the local supply panel and unit and valves (when applicable) have been connected according to the wiring diagrams and to local laws and regulations.
- Fuses, circuit breakers, or protection devices Check that the fuses or the locally installed protection devices are of the size and type specified in "TECHNICAL SPECIFICATIONS".
- Make sure that no fuses or protection devices have been bypassed.
- Ground wiring: make sure that the ground wires have been connected properly and that the ground terminals are tightened.
- Internal wiring: visually check the switch box for loose connections or damaged electrical components.
- Mounting: check that the unit is properly mounted, to avoid abnormal noises and vibrations when starting up the unit.
- Damaged equipment: check the inside of the unit for damaged components or squeezed pipes.
- Refrigerant leak: check the inside of the unit for refrigerant leakage. If there is a refrigerant leak, call your local dealer.
- Power supply voltage: check the power supply voltage on the local supply panel. The voltage must correspond to the voltage on the identification label of the unit.
- Shut-off valves: make sure that the shut-off valves are fully open.
- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.
- Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
- Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.

8.3 Failure diagnosis at first installation

- If nothing is displayed on the user interface, it is necessary to check for any of the following abnormalities before diagnosing possible error codes.
 - Disconnection or wiring error (between power supply and unit and between unit and user interface).
 - The fuse on the PCB may be broken.
- If the user interface shows "E8" or "E0" as an error code, there is a possibility that there is air in the system, or the water level in the system is less than the required minimum.
- If the error code E2 is displayed on the user interface, check the wiring between the user interface and unit.
- More error code and failure causes can be found in 12 "Error codes".

9 FINAL CHECKS AND TEST RUN

The installer is obliged to verify correct operation of unit after installation

Final checks

Before switching on the unit, read following recommendations:

- When the installation and parameter setting are completed, cover all the sheet metal of the unit well.
- The unit should be maintained by professionals

10 MAINTENANCE AND SERVICE

In order to ensure optimal availability of the unit, a number of checks and inspections on the unit and the field wiring have to be carried out at regular intervals

This maintenance needs to be carried out by your local technician.

DANGER

- Before carrying out any maintenance or repairing activity, must switch off the power supply on the supply panel.
- Do not touch any live part for 10 minutes after the power supply is turned off.
- The crank heater of compressor may operate even in standby.
- Please note that some sections of the electric component box are hot.
- Forbid touch any conductive parts.
- Forbid rinse the unit. It may cause electric shock or fire.
- Forbid leave the unit unattended when service panel is removed.
- Refrigerant supplement:
 - Each unit has been equipped with sufficient refrigerant when leaving the factory. Do not charge or change the refrigerant. If you need to replenish the refrigerant due to leakage, please contact the engineer or dealer.
- Gas tightness Test 4.3 MPa.
- Do not change the system parameters before consulting the engineer.
- Please use the parts provided or recommended by the company, do not use the parts unqualified.
- Ensure the waterways are clean and avoid dirt and blockage.




10.1 Routine maintenance

The following checks must be performed at least once a year by qualified person.


- Thoroughly inspect and clean up the unit.
 - Water filter
 - Clean the waterway system.
 - Clean the water filter.
 - Check water pump, regulating valve and other waterway equipment.
 - Unit switch box
 - Carry out a thorough visual inspection of the switch box and look for obvious defects such as loose connections or defective wiring.
 - Check for correct operation of contactors with an ohm meter. All contacts of these contactors must be in open position.
- Winter antifreeze
- If the unit is not operation in winter, remove the inlet and outlet water connections and let off the water of the unit.

10.2 Notes for maintenance & Repair

10.2.1 Top panel remove

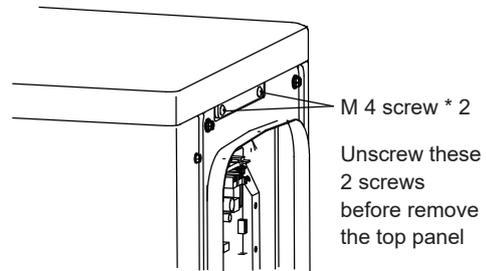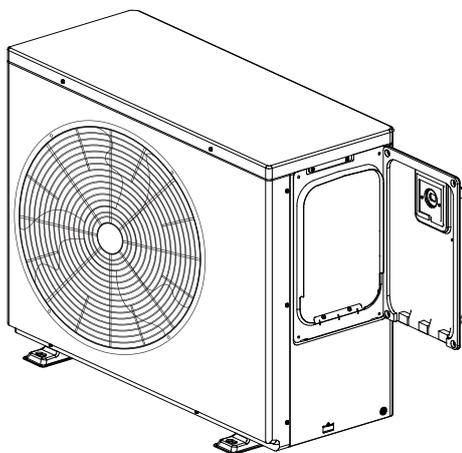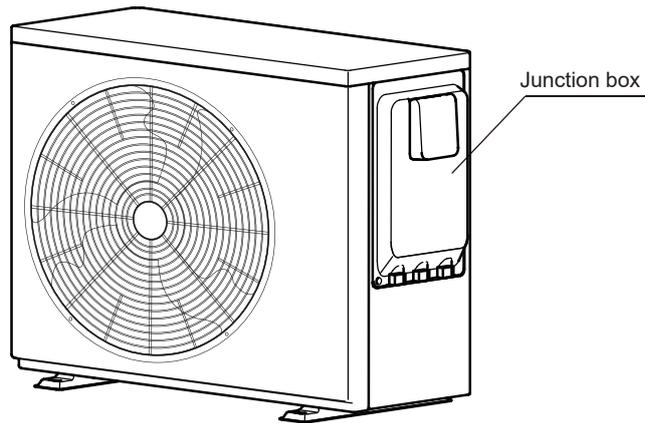

10.2.2 Titanium heat exchanger replace

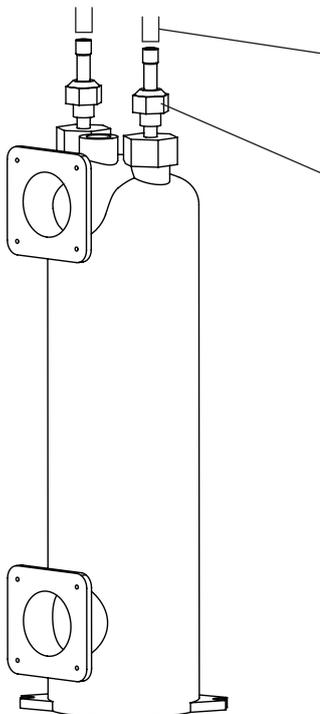


The titanium heat exchanger's remove and installation can only by loosening the copper tube at the top (use welding torch).

⚠ WARNING

Do not repair or replace heat exchangers by unscrewing nuts. This operation will damage the sealing surface of the nut and cause refrigerant leakage. At the same time, it needs to be cooled when welding nearby.

10.2.3 Inverter drive board replace

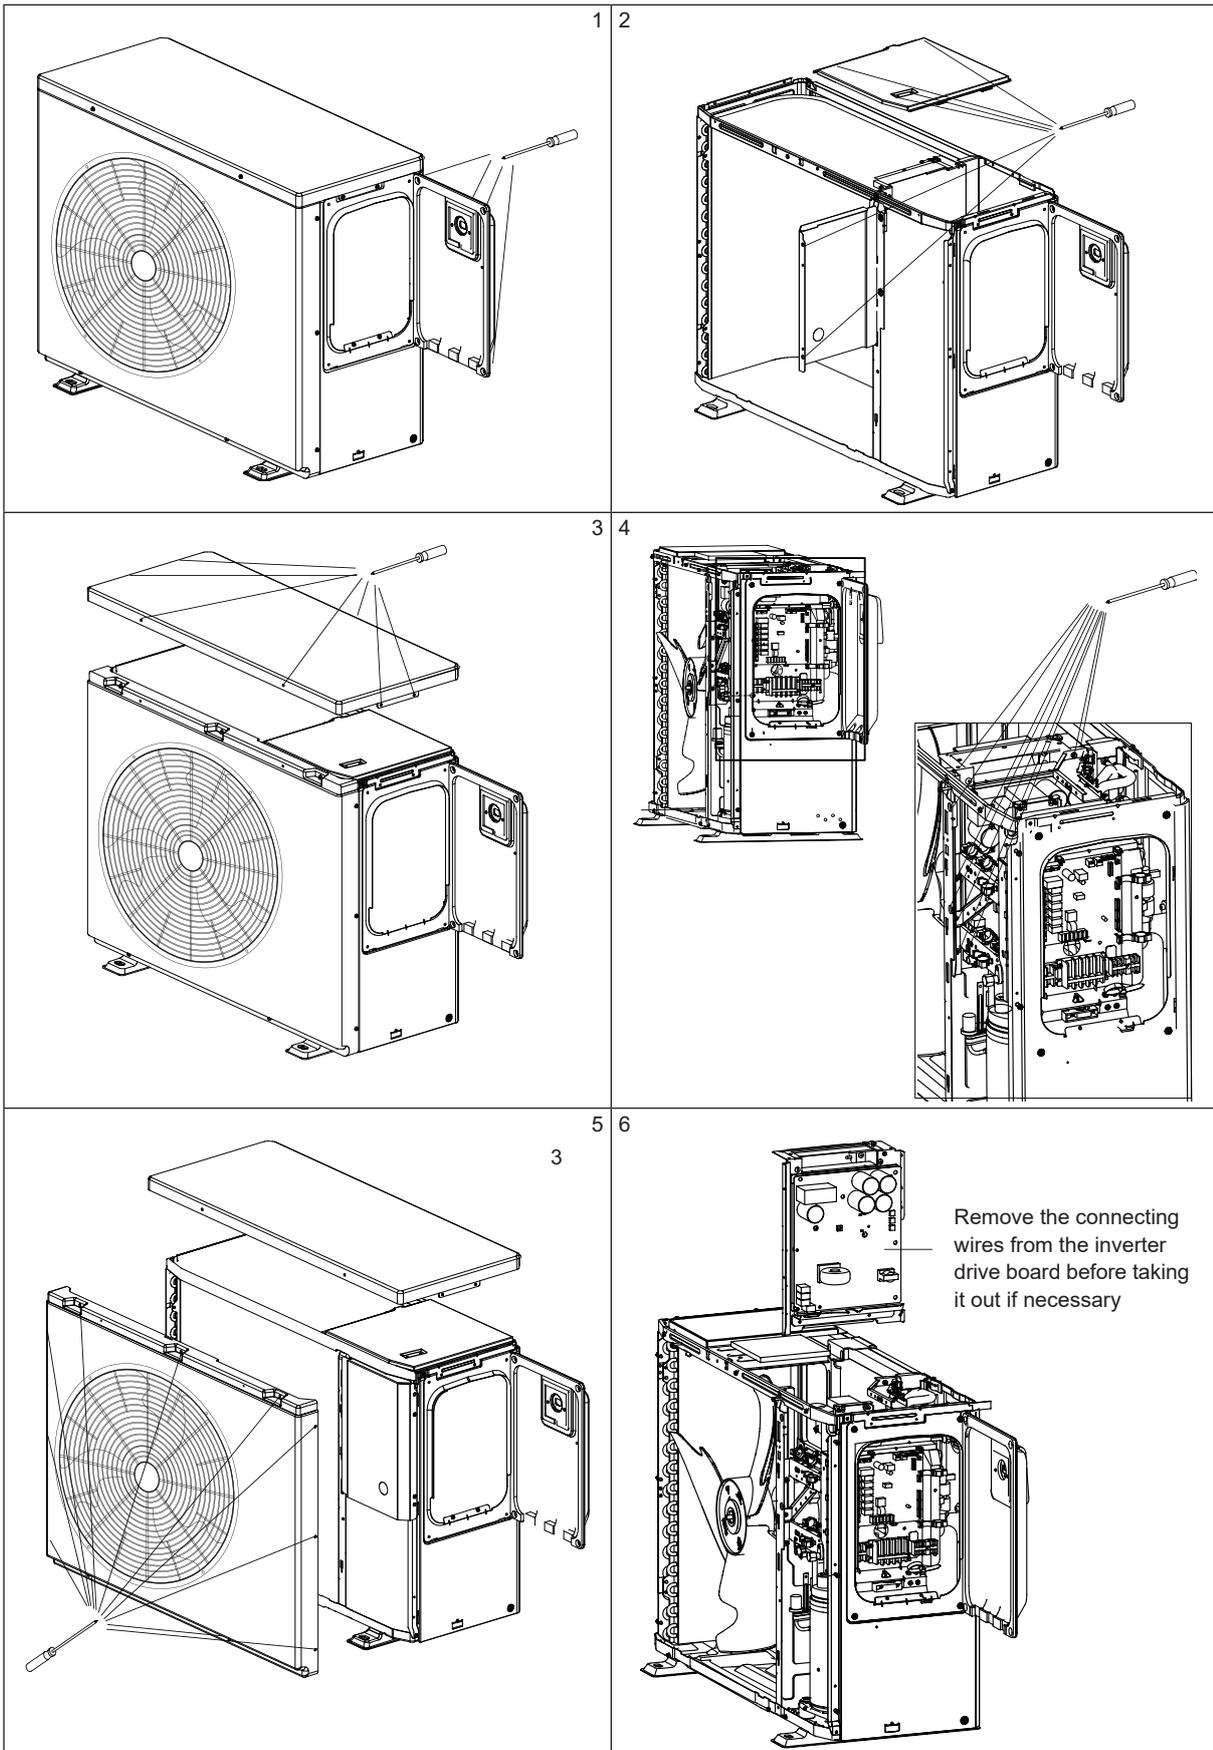

11 TROUBLESHOOTING

Error code

NO.	Display	Malfunction or Protection
1	bA	Ambient temp. sensor (T4) out of operation range
2	C7	High temperature protection of inverter module
3	E0	Water flow malfunction(after 3 times E8)
4	E1	Phase loss or neutral wire and live wire are connected reversely (only for three phase unit)
5	E2	Communication malfunction between controller and main control board
6	E3	Total outlet water temperature sensor(T1) malfunction
7	E5	Air side heat exchanger temperature sensor (T3)malfunction
8	E6	The ambient temperature sensor (T4)malfunction
9	E8	Water flow malfunction
10	E9	Suction temperature sensor(Th) malfunction
11	EA	Discharge temperature sensor(Tp) malfunction
12	Ed	Inlet water temperature sensor (Tw_in) malfunction
13	EE	EEprom malfunction
14	F1	DC bus low voltage protection
15	F6	EEV1 fault
16	H1	Communication malfunction between main control board and inverter board
17	H2	Liquid refrigerant temperature sensor(T2) malfunction
18	H3	Gas refrigerant temperature sensor(T2B) malfunction
19	H4	Three times L0 protection
20	H6	The DC fan malfunction
21	H7	Voltage protection
22	H8	HP pressure sensor malfunction
23	HA	Outlet water temp. sensor (Tw_out) malfunction
24	Hb	Three times PP protection and Tw_out below 7 °C
25	HF	Inverter module board EE prom malfunction
26	HH	10 times H6 in 2 hours
27	HP	Low pressure protection in cooling mode
28	P0	Low pressure switch protection
29	P1	High pressure switch protection
30	P3	Compressor overcurrent protection
31	P4	Comp discharge temp. too high protection
32	P5	Tw_out-Tw_in value too big protection
33	Pb	Anti-freeze mode
34	PP	Tw_out-Tw_in abnormal protection
35	Pd	High temperature protection of air side heat exchanger temperature(T3)
36	L0	Inverter or compressor protection
37	L1	DC bus low voltage protection
38	L2	DC bus high voltage protection
39	L3	Current sampling error of PFC circuit
40	L4	Rotating stall protection
41	L5	Zero speed protection
42	L7	Phase loss protection of compressor

Common malfunctions/protections and solutions in heating mode

NO.	Error code	Malfunction / protection	Solutions
1	E2	Communication failure	<ol style="list-style-type: none"> 1. Restart the unit. 2. Power off the unit, unplug and plug the cable of display, and then power on. 3. If all the above checks are ok, the fault still exists, please contact the installer or retailer.
2	E8	Water flow protection	<ol style="list-style-type: none"> 1. Check whether the water pump works properly. 2. Check whether there is no water flow or water flow is too low. 3. If all the above checks are ok, the fault still exists, please contact the installer or retailer.
3	P5	The temperature difference between inlet and outlet is too large	<ol style="list-style-type: none"> 1. Check whether the water pump works properly. 2. Check whether there is no water flow or water flow is too low. 3. If all the above checks are ok, the fault still exists, please contact the installer or retailer.
4	bA	Ambient temp. Out of operation range	<ol style="list-style-type: none"> 1. Check whether the ambient temperature is lower than the operating range of the unit. 2. Check whether the finned heat exchanger and air outlet of the unit are blocked by debris. 3. Check whether the ambient temperature probe is detached or attached to the fin. 4. If all the above checks are ok, the fault still exists, please contact the installer or retailer.
5	P1	High pressure protection	<ol style="list-style-type: none"> 1. Check whether the water pump works properly. 2. Check whether there is no water flow or water flow is too low. 3. If all the above checks are ok, the fault still exists, please contact the installer or retailer.
6	P0	Low pressure protection	<ol style="list-style-type: none"> 1. Check whether the fan is running properly. 2. Check whether the finned heat exchanger and air outlet of the unit are blocked by debris. 3. If all the above checks are ok, the fault still exists, please contact the installer or retailer.

12 TECHNICAL SPECIFICATIONS

Model		1-phase					3-phase	
		70	90	120	160	200	160	200
Power supply		220-240 V~ 50 Hz					380-415 V 3N~ 50 Hz	
Boost Heating capacity*	kW	10.30	12.80	14.50	18.70	21.80	18.70	21.80
Boost COP*		6.60	6.00	6.35	5.10	4.40	5.10	4.40
Heating capacity*	kW	7.16	9.15	12.50	16.00	18.80	16.00	18.80
COP*		7.50	6.80	7.00	6.00	5.20	6.00	5.20
Boost Heating capacity**	kW	7.30	9.30	10.50	15.00	17.00	15.00	17.00
Boost COP**		4.69	4.45	4.60	3.80	3.60	3.80	3.60
Heating capacity**	kW	5.30	6.80	9.12	12.80	14.50	12.80	14.50
COP**		5.10	4.90	5.05	4.50	4.20	4.50	4.20
Cooling capacity	kW	4.50	5.20	7.00	7.80	8.60	7.80	8.60
EER		4.00	3.35	4.00	3.00	2.60	3.00	2.60
Sound pressure level (1 m)	dB(A)	41	43	49	50	54	50	54
Silence mode sound pressure level (1 m)	dB(A)	39	39	40	41	43	41	43
Water flow	m ³ /h	3.1	3.9	5.4	6.9	8.3	6.9	8.3
Water pressure drop	kPa	4.6	7.3	13.8	23.0	33.0	23.0	33.0
Heating condition*: ambient temp. DB 27 °C, WB 24.3 °C; water outlet temp. 28 °C Heating condition**: ambient temp. DB 15 °C, WB 12 °C; water outlet temp. 28 °C Cooling condition: ambient temp. DB 35 °C, WB 24 °C; water outlet temp. 28 °C Sound pressure test condition: ambient temp. DB 27 °C, WB 24.3 °C; water outlet temp. 28 °C								

Note: The data in the performance table are for reference only, the exact data are on the nameplate.

13 INFORMATION SERVICING

1) Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

2) Work procedure

Works shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

3) General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the work space shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

4) Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

5) Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry power or CO₂ fire extinguisher adjacent to the charging area.

6) No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. NO SMOKING signs shall be displayed.

7) Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.

A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8) Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using flammable refrigerants.

9) Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

The charge size is in accordance with the room size within which the refrigerant containing parts are installed.

The ventilation machinery and outlets are operating adequately and are not obstructed.

If an indirect refrigerating circuit is being used, the secondary circuits shall be checked for the presence of refrigerant; marking to the equipment continues to be visible and legible.

Marking and signs that are illegible shall be corrected.

Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.

That there are no live electrical components and wiring are exposed while charging, recovering or purging the system.

That there is continuity of earth bonding.

10) Repairs to sealed components

Ensure that apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

11) Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

12) Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

13) Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

14) Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants. Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25% maximum) is confirmed. Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work. If a leak is suspected, all naked flames shall be removed or extinguished. If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

15) Removal and evacuation

When breaking into the refrigerant circuit to make repairs or for any other purpose conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

Remove refrigerant;

Purge the circuit with inert gas;

Evacuate;

Purge again with inert gas;

Open the circuit by cutting or brazing.

The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

NOTE

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be flushed with OFN to render the unit safe. This process may need to be repeated several times.

Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system.

When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not closed to any ignition sources and there is ventilation available.

16) Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed:

Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.

Cylinders shall be kept upright.

Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.

Label the system when charging is complete (if not already).

Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

17) Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken.

In case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

a) Become familiar with the equipment and its operation.

b) Isolate system electrically

c) Before attempting the procedure ensure that:

Mechanical handling equipment is available, if required, for handling refrigerant cylinders.

All personal protective equipment is available and being used correctly.

The recovery process is supervised at all times by a competent person.

Recovery equipment and cylinders conform to the appropriate standards.

d) Pump down refrigerant system, if possible.

e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.

f) Make sure that cylinder is situated on the scales before recovery takes place.

g) Start the recovery machine and operate in accordance with manufacturer s instructions.

h) Do not overfill cylinders. (No more than 80% volume liquid charge).

i) Do not exceed the maximum working pressure of the cylinder, even temporarily.

j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.

k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

18) Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

19) Recovery

When removing refrigerant from a system, either for service or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct numbers of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant(i.e special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.

Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order.

Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

20) Transportation, marking and storage for units

Transport of equipment containing flammable refrigerants Compliance with the transport regulations.

Marking of equipment using signs Compliance with local regulations.

Disposal of equipment using flammable refrigerants Compliance with national regulations.

Storage of equipment/appliances.

The storage of equipment should be in accordance with the manufacturer's instructions.

Storage of packed (unsold) equipment .

Storage package protection should be constructed such that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge.

The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

16125300A15129 VB



Kaysun
by **frigicoll**

MAIN OFFICE

Blasco de Garay, 4-6
08960 Sant Just Desvern
(Barcelona)
Tel. +34 93 480 33 22
<http://www.frigicoll.es/>
<http://www.kaysun.es/en/>

MADRID

Senda Galiana, 1
Polígono Industrial Coslada
Coslada (Madrid)
Tel. +34 91 669 97 01
Fax. +34 91 674 21 00
madrid@frigicoll.es